



PROV™ VINYL REPLACEMENT WINDOW SYSTEMS | HOW TO INSTALL

HOW TO INSTALL

This Installation Guide is designed to give you an idea of what's involved when replacing a window. Use it as a guide. For your convenience, we also offer a step-by-step installation video which will help you save additional dollars by doing your own installation. Just ask your dealer for the ProV Replacement Window installation video.

Actual detailed installation instructions are packed inside each ProV Vinyl Replacement Window. Professional installation may be available. Ask your Vetter dealer for information.

REMOVING THE OLD SASH



Figure 1
From inside your home, carefully remove the inside stop from the old window with a broad chisel or putty knife. Don't throw these pieces away. You'll need them later.



Figure 2
Remove the cords and pulleys. Then take out the old bottom sash.

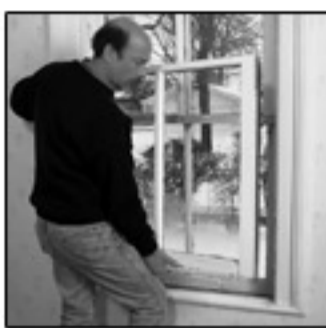


Figure 3
Now remove parting stops at the top and sides and take out the old top sash. Repair jambs, fill old pulley holes with insulation. You're now ready to install your vinyl replacement window.

INSTALLING THE NEW WINDOW



Figure 4
Trial fit the window into the opening. Install the head expander if needed.



Figure 5
Remove the replacement window from the opening. Caulk the inside edge of the blind stop along the jambs and along the head.



Figure 6
Insert the replacement window into the opening by tilting the bottom of the window onto the sill. Press the window tightly against the caulked stops.



Figure 7
With the window closed and locked, make sure the window frame is level, square and plumb. Shim window to help keep window frame centered and square.



Figure 8
Secure the replacement window using the wood screws provided.



Figure 9
Check for proper operation, locking and fit. Make adjustments as necessary. Center screw is installed to ensure that the width at center of unit equals the width from top to bottom.



Figure 10
Insert Sill Filler into the accessory groove. Tap into place using a rubber mallet.



Figure 11
Run a bead of caulk on the exterior seam where the Sill Filler meets the frame and the vinyl window meets the Blind Stop.



Figure 12
Caulk interior where replacement window and wood frame meet (on the sides and along the top).



Figure 13
Re-nail the original wood sash stops that were saved in Step One. Install screw hole plugs.

YOU'RE FINISHED

Sit back, relax and enjoy your new window.