



PROV™ VINYL REPLACEMENT WINDOW SYSTEMS | HOW TO MEASURE

OUT WITH THE OLD

PROV Vinyl Replacement Windows transform old windows into new and help protect the investment you've made in your home. Vinyl replacement windows are simple to install, so drafty, unsightly windows that lessen the value of your home quickly become attractive, energy-efficient windows. PROV Replacement Windows provide the look you want and the quality you need without having to replace the entire window.

The beauty and strength of your new windows result from the quality and preparation of the materials. Like select fusion welded frame and sash members for superior energy efficiency and structural strength. And, HiPro4 argon filled, Low-E² insulating glass.

High quality PROV Replacement Windows also reflect the thoughtful engineering and careful workmanship that go into them. You can see it in features like sash that tilt for easy cleaning, and pre-installed sash locks.

Lastly, Vetter's PROV Replacement Windows are available in a wide variety of shapes and styles, offering you increased design flexibility. Choose from single-hungs, double-hungs, casements, awnings or rolling windows.

DETERMINE THE WIDTH

- Measure the width of the window sash you are replacing. Measure from the innermost points between the jambs (Figure 1). Always measure between the jambs at three different spots: top, bottom and middle (Figure 2). Make sure to measure from the surface of one jamb to the other, not from the parting stop of blind stop.
- After you measure the width from the three spots, write down the smallest of the three width measurements.
- Then, mark it down in the appropriate space in the **Order Form**. It'll make ordering your new Vinyl Replacement Window easier.

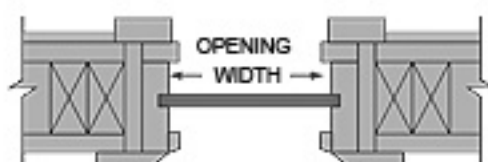


Figure 1
Opening width, top view



Figure 2
Width, measure top, middle and bottom

DETERMINE THE HEIGHT

- Measure the height of the window sash you're replacing. Measure from where the top sash meets the head jamb – to where the bottom sash meets the interior sill when fully closed (Figure 3). Here again, measure three ways: left side, right side and middle (Figure 4). Now take the smallest of the three height measurements and write it down.
- And mark it down on the order form just like you did for the width. Now you're ready to order your Vinyl Replacement Windows.

IMPORTANT: The smallest width and height measurements (for each window sash you plan to replace) are the ones you will use to order your Vinyl Replacement Windows.

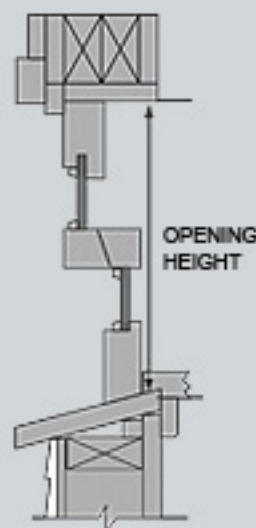


Figure 3
Opening height, side view



Figure 4
Height Measure left, right and center